




Panasonic®

User Manuals Wired Remote Control CZ-RD514C

ENGLISH	2 ~ 3
DEUTSCH	4 ~ 5
NEDERLANDS	6 ~ 7
ITALIANO	8 ~ 9
ΕΛΛΗΝΙΚΑ	10 ~ 11
FRANÇAIS	12 ~ 13
ESPAÑOL	14 ~ 15
ESPAÑOL (LE)	16 ~ 17
PORTUGUÊS	18 ~ 19
PORTUGUÊS (BR)	20 ~ 21
БЪЛГАРСКИ	22 ~ 23
РУССКИЙ	24 ~ 25
УКРАЇНСЬКА	26 ~ 27
SVENSKA	28 ~ 29
NORSK	30 ~ 31
SUOMI	32 ~ 33
DANSK	34 ~ 35
中文	36 ~ 37
B.MALAYSIA	38 ~ 39
B.INDONESIA	40 ~ 41
ภาษาไทย	42 ~ 43
عربي	44 ~ 45
TIẾNG VIỆT	46 ~ 47
HRVATSKA	48 ~ 49
TÜRKÇE	50 ~ 51
ҚАЗАҚША	52 ~ 53


WIRED REMOTE CONTROL

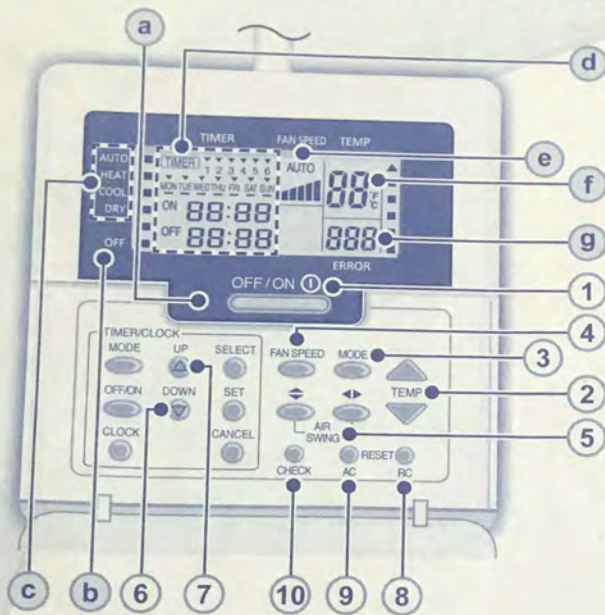

Remote Control Display

- (a) OPERATION LED
- (b) OFF INDICATOR
- (c) OPERATION MODE SELECTION INDICATOR
- (d) TIMER/CLOCK SETTING DISPLAY

Lights up if Timer operation is selected

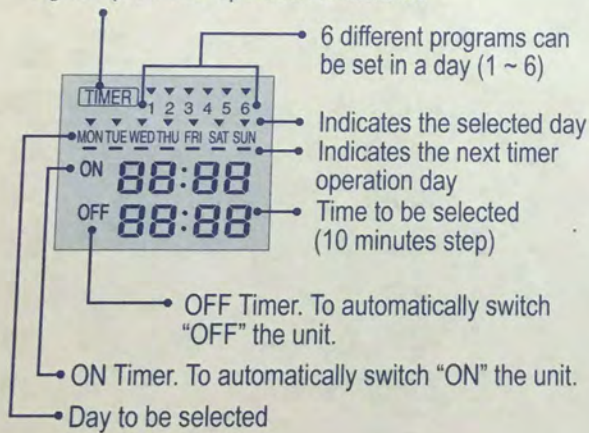

- (e) FAN SPEED DISPLAY
- (f) TEMPERATURE SETTING DISPLAY
- (g) ERROR CODE DISPLAY

Remote Control Preparation

1. Press CLOCK
2. Press UP or DOWN to select current day.
3. Press SET to confirm.
4. Repeat steps 2 and 3 to set the current time.

Press the remote control's button

1 TO TURN ON OR OFF THE UNIT

- Please be aware of the OFF indication on the remote control display to prevent the unit from starting/stopping improperly.

2 TO SET TEMPERATURE

- Selection range: 16°C ~ 30°C.

3 TO SELECT OPERATION MODE

AUTO mode - For your convenience

- Unit selects operation mode during startup according to temperature setting and room temperature.

HEAT mode - To enjoy warm air

- Unit takes a while to warm up. The power indicator blinks during this operation.

 
COOL mode - To enjoy cool air

- Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

DRY mode - To dehumidify the environment

- Unit operates at low fan speed to give a gentle cooling operation.

4 TO SELECT FAN SPEED (5 OPTIONS)



- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.

5 TO ADJUST AIRFLOW DIRECTION

- Keeps the room ventilated.
- In COOL/DRY mode, if AUTO is set, the louver swing left/right and up/down automatically.
- In HEAT mode, if AUTO is set, the horizontal louver fix at predetermined position. The vertical louver swing left/right after the temperature rises.
- For Hide-Away models, AIR SWING buttons are not in use. Airflow direction can not be adjusted.

- 6 Press and hold for approximately 10 seconds to show temperature setting in °C or °F.

- 7 Press and hold for 5 seconds to dim or restore the unit's indicator brightness.

- 8 Press to restore the remote control's default setting.

- 9 Not used in normal operations.

- 10 Retrieve error code.

- During operation, the unit stops and both (a) and (b) is OFF indicates abnormality occurs.

1. Ensure (a) is OFF, press CHECK for 5 seconds.


2. Press UP or DOWN. If error code and abnormality can be identified, (a) will be ON continuously, then write down the error code.

3. Press CHECK for 5 seconds to quit checking.

4. Turn the unit off and reveal the error code to authorized dealer.

DAILY TIMER SETTING

- To turn ON or OFF the unit at a preset time.

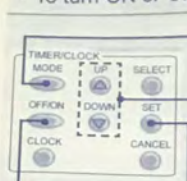


- Press once to change the display from Clock to Timer or vice-versa. Press for more than 4 seconds to change the display from Daily Timer to Weekly Timer or vice-versa.
- Select ON or OFF timer
- Set the time
- Confirm

- To cancel ON or OFF timer, press **CANCEL**.
- Timer operation is based on the clock set in the remote control and repeats daily once set.
- The timer closest to the current time will be activated first.
- If timer is cancelled manually or due to power failure, you can restore the previous setting by pressing **SET**.

WEEKLY TIMER SETTING

- Daily timer and weekly timer could not be set at the same time.
- Promotes energy saving by allowing you to set up to 6 programs in any given day.

- Press Timer **MODE** for 4 seconds to change display to weekly timer.

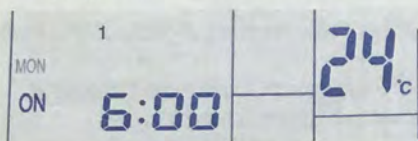

- Press Timer **UP** or **DOWN** to select your desired day.
- Press **SELECT** to confirm your selection.
- "1" will be blinking, press **SELECT** to set program 1.
- Press Timer **OFF/ON** to select ON or OFF timer.
- Press Timer **UP** or **DOWN** to select your desired time. If you want to set the timer together with your desired temperature, press **TEMP** to select the temperature.
- Press **SET** to confirm program 1. The selected day will be highlighted with **▼**.
 - After 2 seconds, the display will move to the next program. Repeat steps 4 to 7 to set programs 2 to 6.
 - Same timer program cannot be set in the same day.
 - During timer setup, if no button is pressed within 30 seconds, or if the **SET** button is pressed, the setting at that moment is confirmed and timer setup is ended.

OPERATION DETAILS

The timer setting will shown at wired remote control only but not at indoor unit's TIMER indicator.

Check Current Timer Program

Perform the step below to check the timer program for a particular day.

- Press Timer **MODE** to enter timer mode.
- Press **SELECT** to enter day setting.
- Press Timer **UP** or **DOWN** until your desired day is shown, press **SELECT** to confirm your selection.
- Press Timer **UP** or **DOWN** to check the set programs.

Modify Current Timer Program or Add New Timer Program

- Press Timer **MODE** to enter timer mode.
- Press **SELECT** to enter day setting.
- Press Timer **UP** or **DOWN** until your desired day is shown.
- Perform steps 4 to 7 of "WEEKLY TIMER SETTING" to modify existing timer program, or add any timer program.

Cancel Current Timer Program

Perform the step below to cancel the timer program for a particular day.

- Press **SELECT** to enter day.
- Press Timer **UP** or **DOWN** until your desired day is shown.
- Press **SELECT** to enter program setting.
- Press Timer **UP** or **DOWN** until your desired program is shown. Press **CANCEL** to cancel the program, **▼** will disappear.

Disable & Enable Weekly Timer

- To disable weekly timer setting, press **MODE**, then press **CANCEL**.
- To enable previous weekly timer setting, press **MODE**, then press **SET**.

NOTE

- When wired remote control is installed ECONAVI, AUTO COMFORT, MILD DRY operation setting from wireless remote control might be disabled. But POWERFUL, QUIET, PATROL, e-ion operation setting could be operate according to wireless remote control.
- When wired remote control is in operation, the timer setting from wireless remote control will be cancelled.

TIMER FAN SPEED TEMP

AUTO
HEAT
COOL
DRY
OFF

TIMER 1 2
MON TUE WED THU FRI SAT SUN
ON 7:00

27°C

ERROR

OFF/ON Ⓜ

Please **DO NOT** open flap.
If timer needs to be over ridden
use **OFF / ON** switch above.